


MANTRA MIS100V2 (REGISTERED DEVICE SERVICE) MANUAL

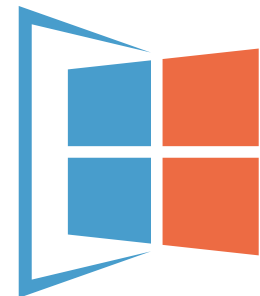

WINDOWS
Version 1.1.0



PHIL TECHNOLOGIES PRIVATE LIMITED


TABLE OF CONTENTS

1. Mantra MIS100V2 Driver Setup Installation.	3
2. Mantra MIS100V2 RD Service Installation.	5
3. MIS100V2 Registered Device	7
4. RD Service Test Application	8
5. Proxy Setting	10
6. Browser Configuration for RD Service	13
7. Configure System Time Zone	16
8. Device Registration on Management Server	17
9. Technical Support	17


1. Mantra MIS100V2 Driver Setup Installation.

1. Start installation:


Right click on setup file and select “Run as administrator”.

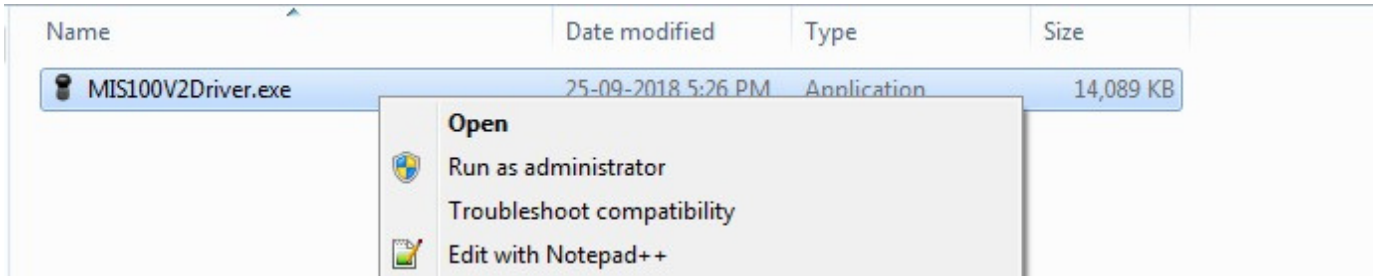


2. Welcome Wizard:

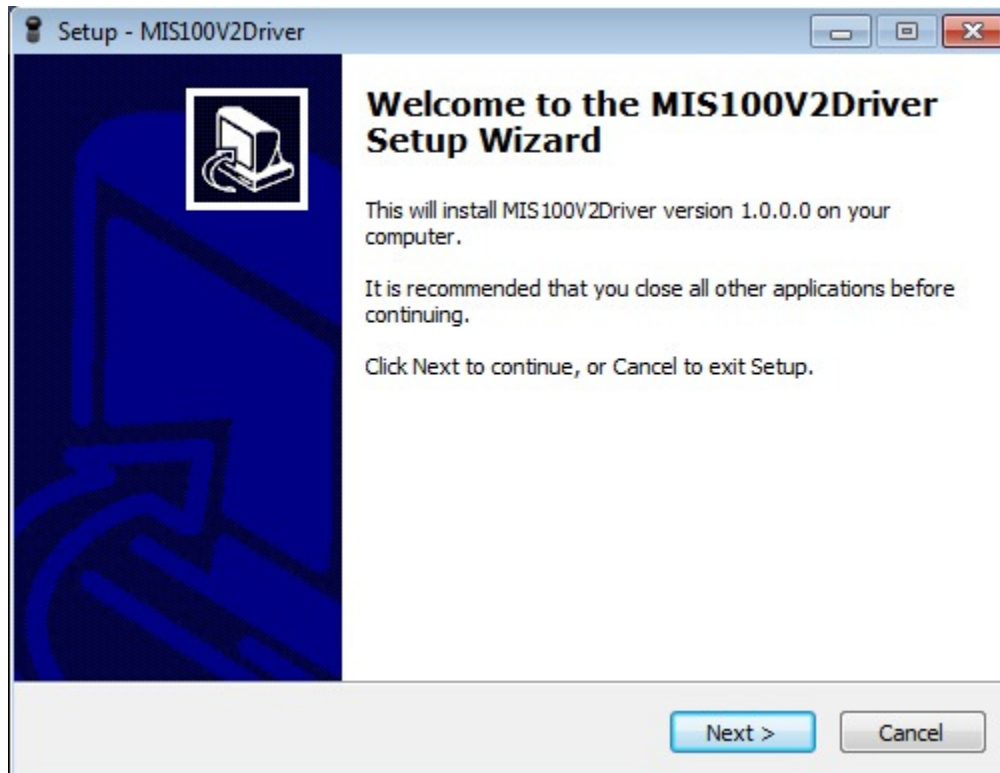

3. Destination Location

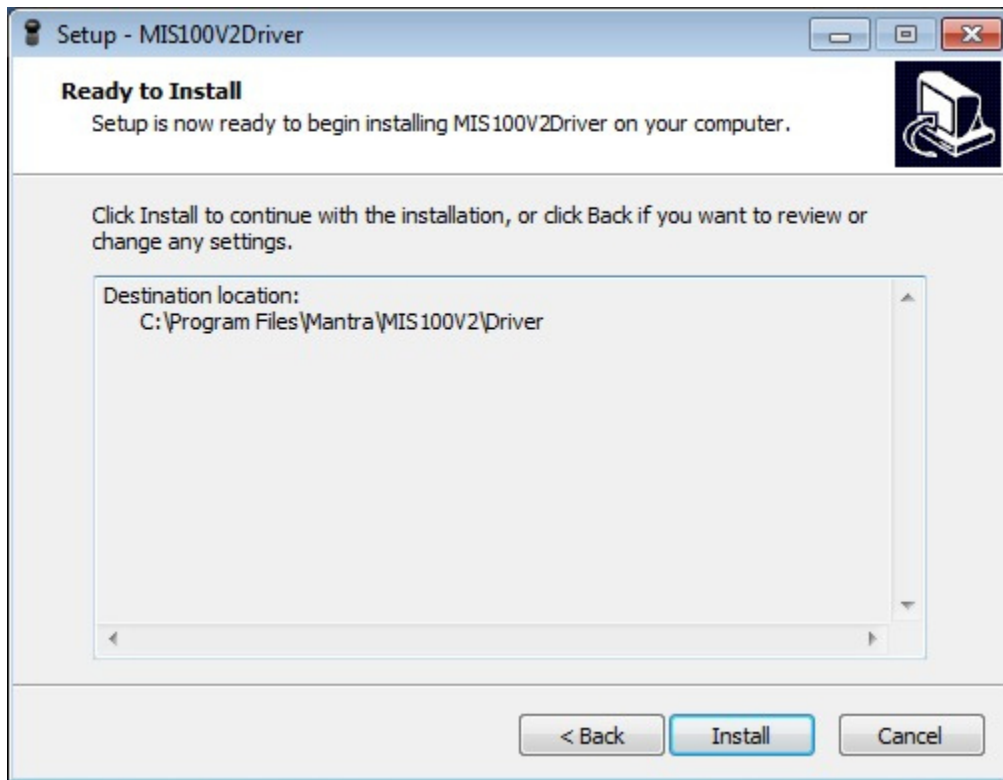


4. Finish Driver Installation

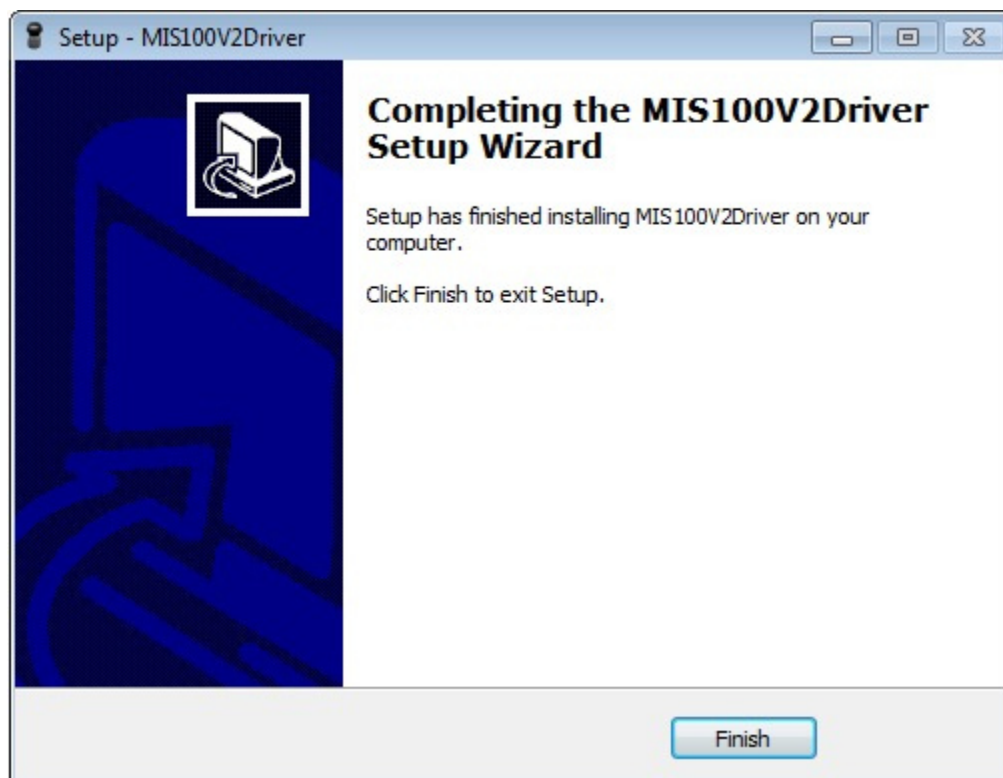


2. Mantra MIS100V2 RD Service Installation.

1. Start installation:


Right click on setup file and select “Run as administrator”.

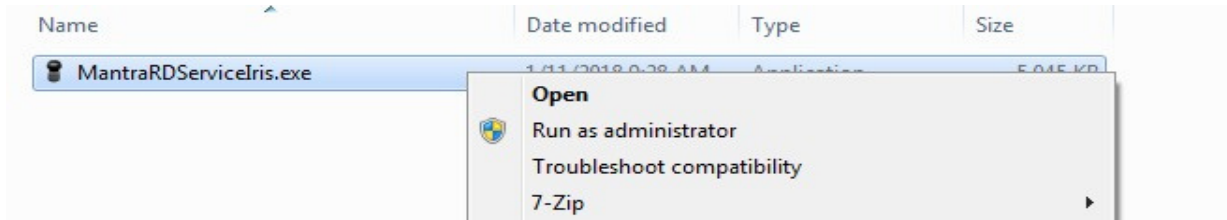

2. Welcome Wizard:

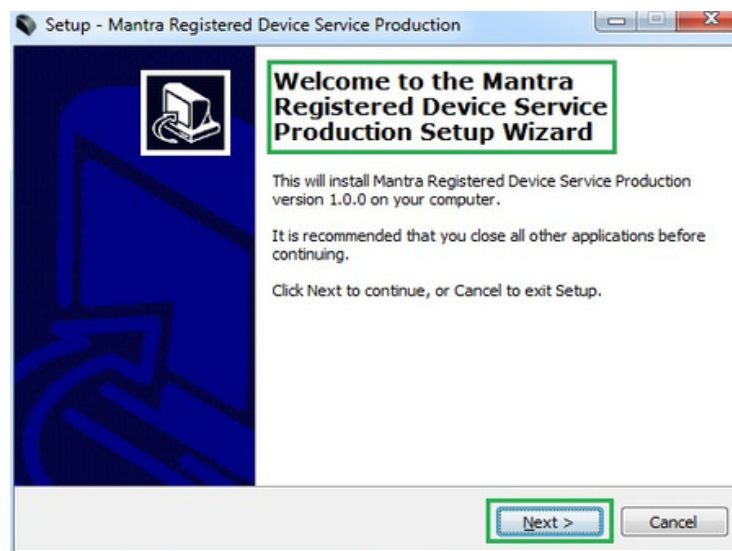


3. Destination Location:

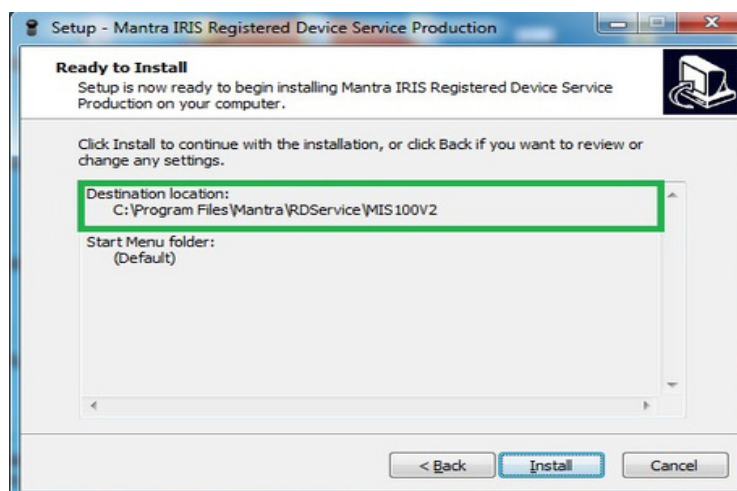

4. Finish RD Service Installation:




After installation of RD Service, it can be found under Services form “Control Panel\All Control Panel Items\Administrative Tools”.

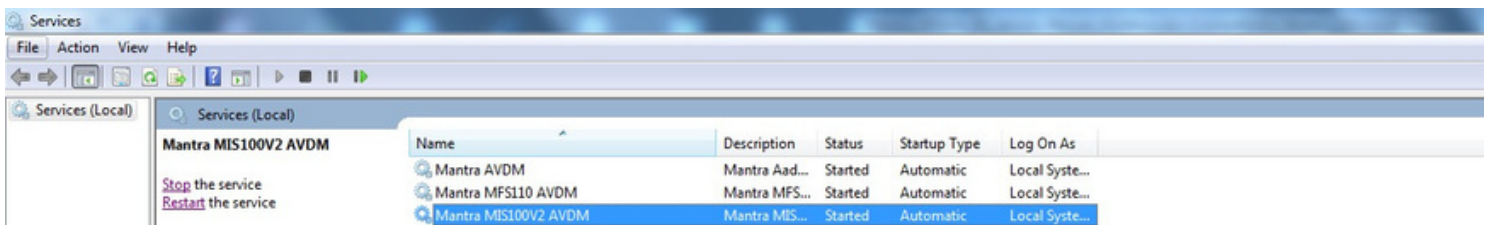

3. MIS100V2 Registered Device

When RD Service will detect public device then it will convert it into registered device and user will be notified again with success response by RD Service.

After that you need to unplug and plug your device.

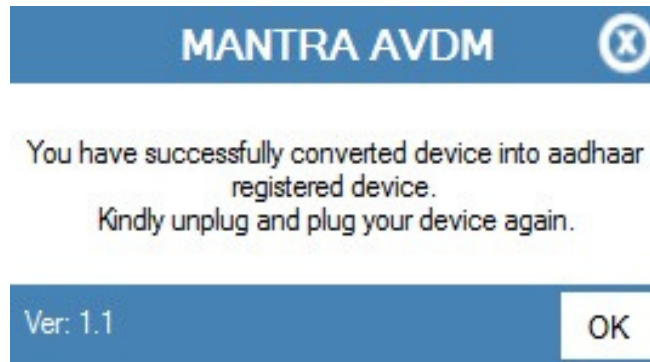

If your device is not listed at Mantra Management Server than user will be notified with below message so in this case you need to contact with our Radium Team at <http://radiumbox.com> Or +91 84343 84343.



Once registered MIS100V2 device will be plugged to the system, RD service will detect it automatically and validate it on Mantra's Management Server. Once validation completed then it will generate below popup for user information.




4. RD Service Test Application


- HTTP : <http://rdtest.aadhaardevice.com/>
- HTTPS : <https://rdtest.aadhaardevice.com/>

(Test https URL if your website is in https)


By running RD Service Test application, user can detect all RD Services installed in their system.

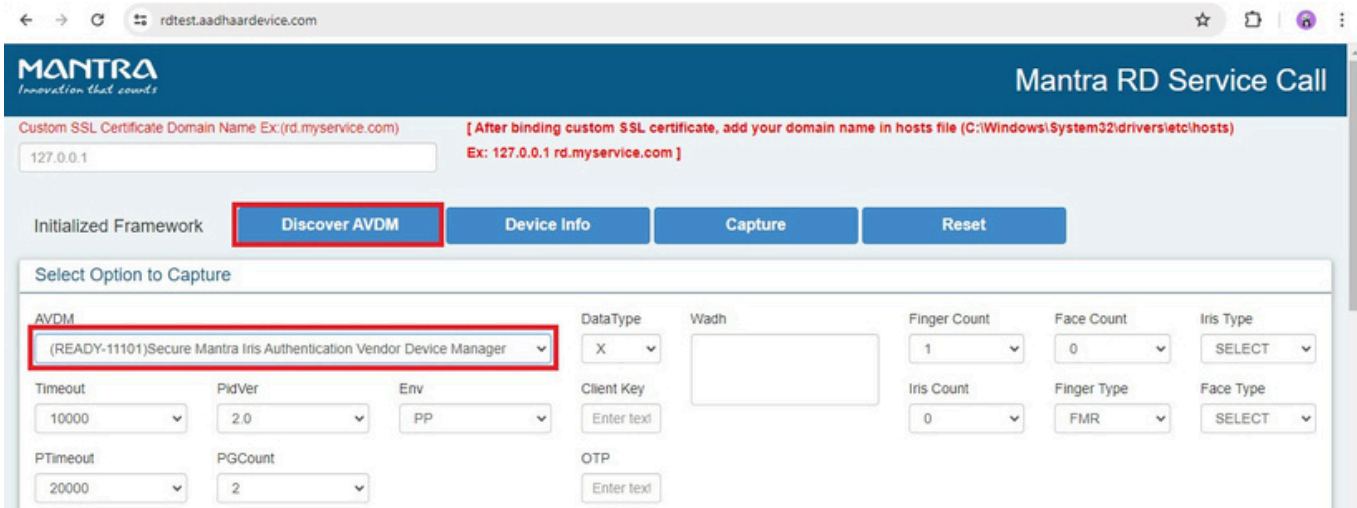

- User can get Device Information which is connected to its system.

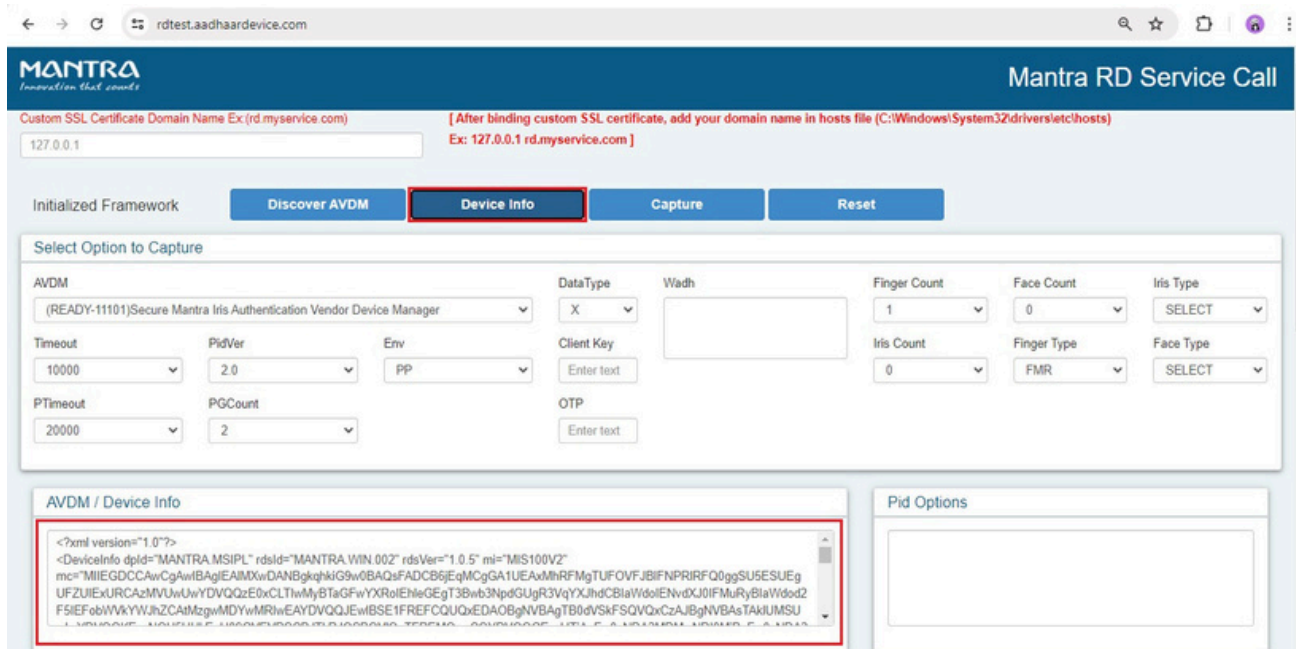

- By calling capture function of RD service, user can capture biometric data.

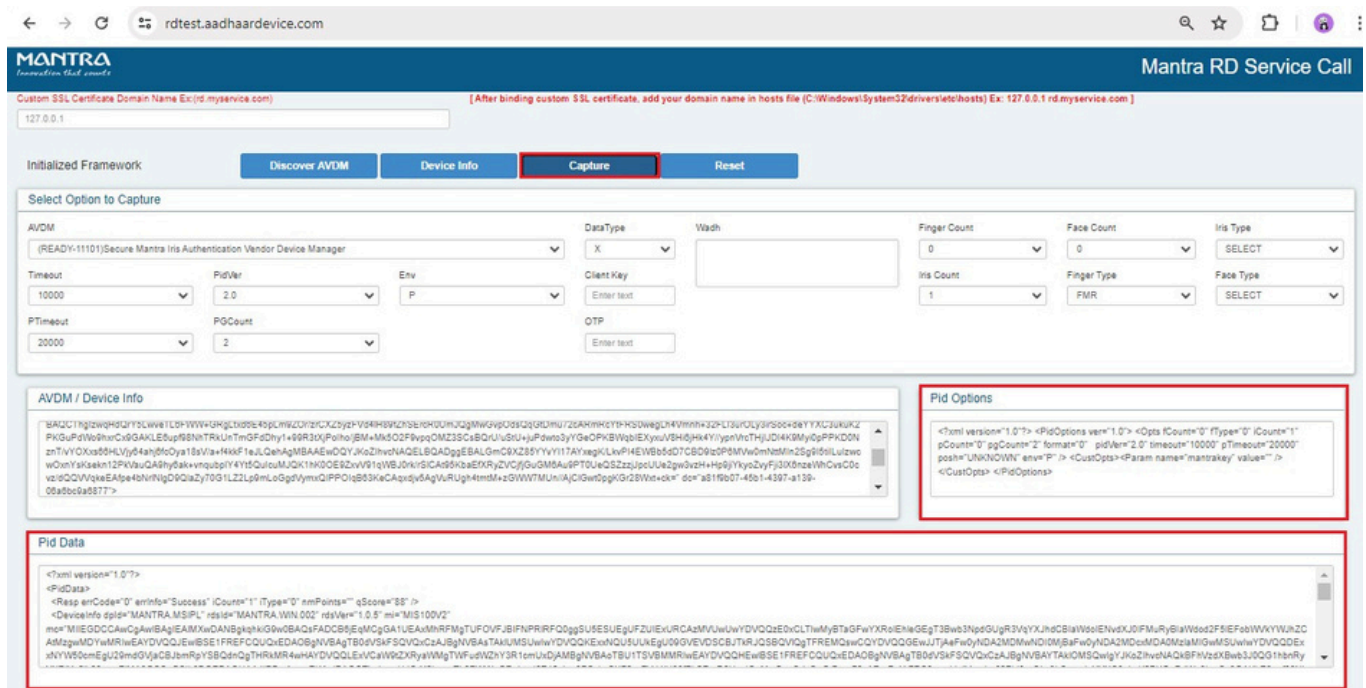



Mantra Management Server

It is necessary that RD service installed in client machine must interact with Mantra's Management Server. For that, client machine must access the domain <https://aadhaardevice.com> and it's all sub-domains.

5. Proxy Setting


Proxy in Network (if proxy is required to connect internet)

- After installation of RD below Application – **Config Mantra IRIS RDService** shortcut will be available on 'desktop' as well as in 'All Programs'.

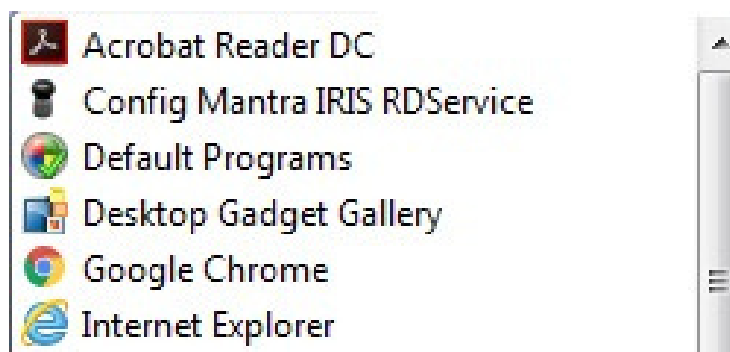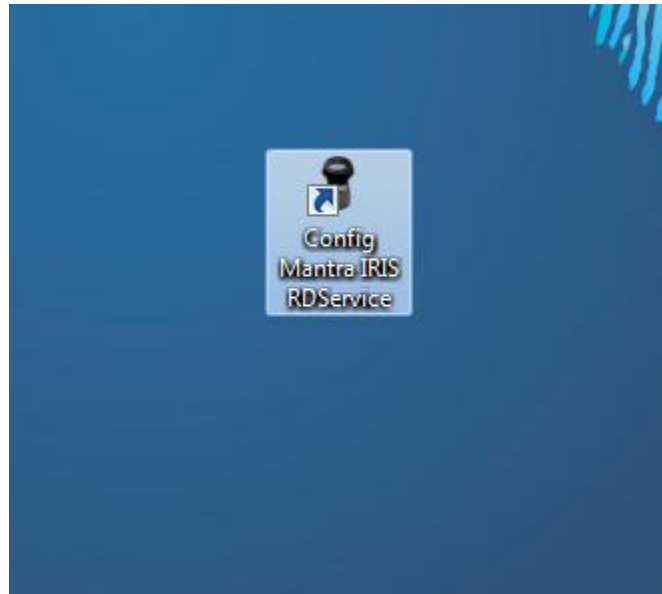




- Enter Username and Password if Proxy Authentication is required otherwise keep as Blank

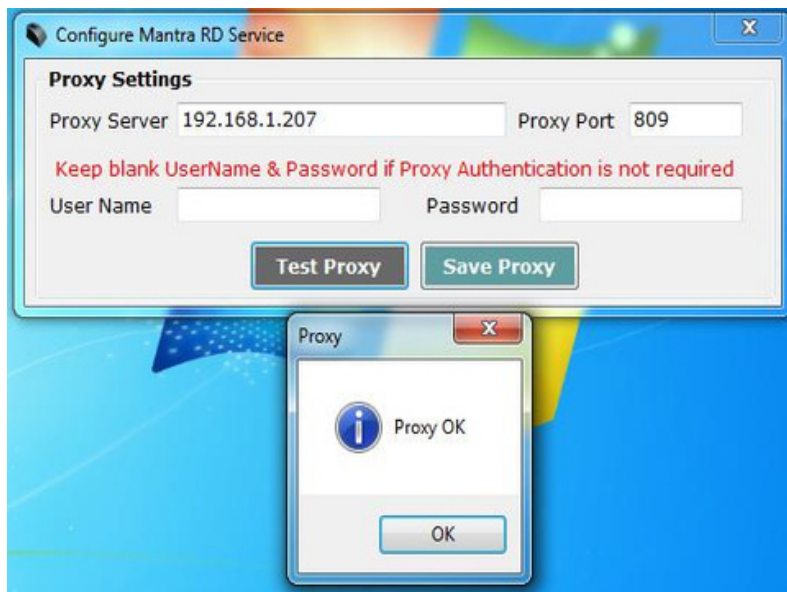

- On “OK” Message of Test Proxy, click on **Save Proxy**.



- You need to “**Unplug and Plug**” device so RD Service will take that proxy setting to communicate “Mantra Management Server”.

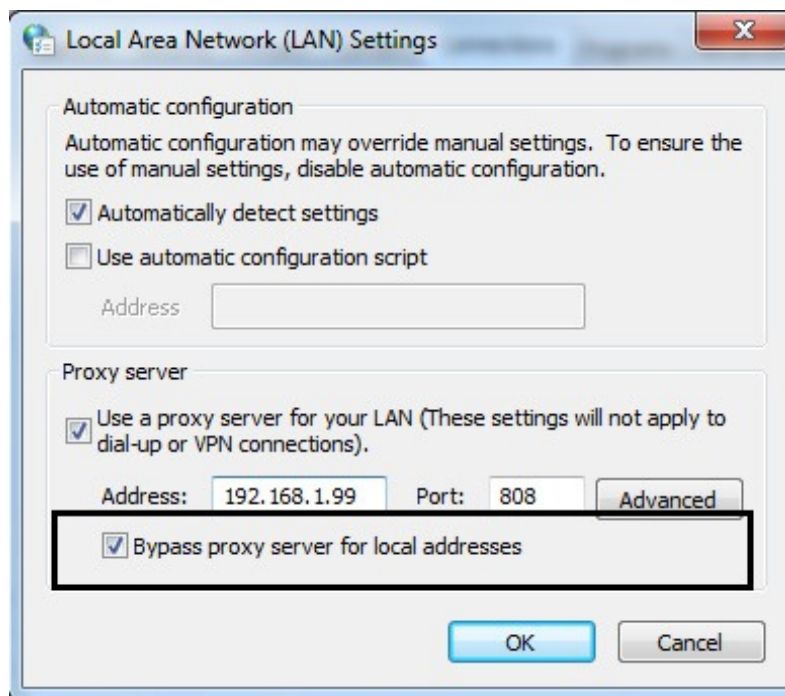

6. Browser Configuration for RD Service


There is no any configuration require in Chrome or Firefox if web application is running on HTTPS.

Below browser configuration for HTTP request only

1) Chrome (For HTTP Request only)


If Web Application which is calling RD Service API is running on HTTP then configure your chrome browser as below.

Browse below URL to change value to 'Disable' for 'Block insecure private network requests'
<chrome://flags/#block-insecure-private-network-requests>

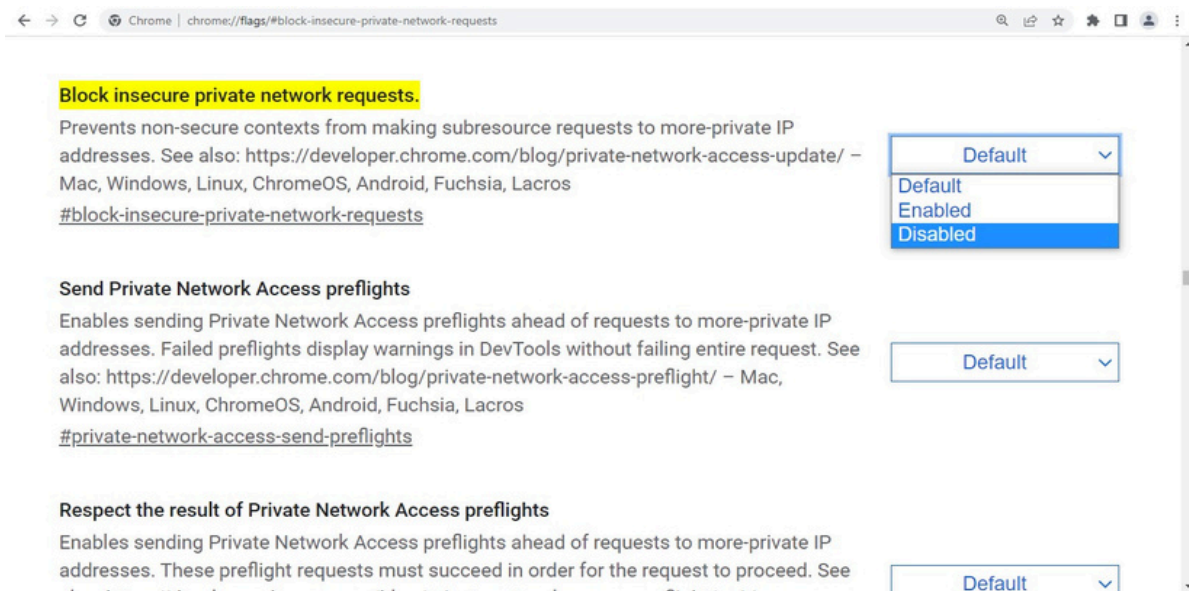


2) Firefox (For HTTP Request only)

Browse below URL to change value to **TRUE** for 'network. web socket. allow Insecure From HTTPS'
about: config


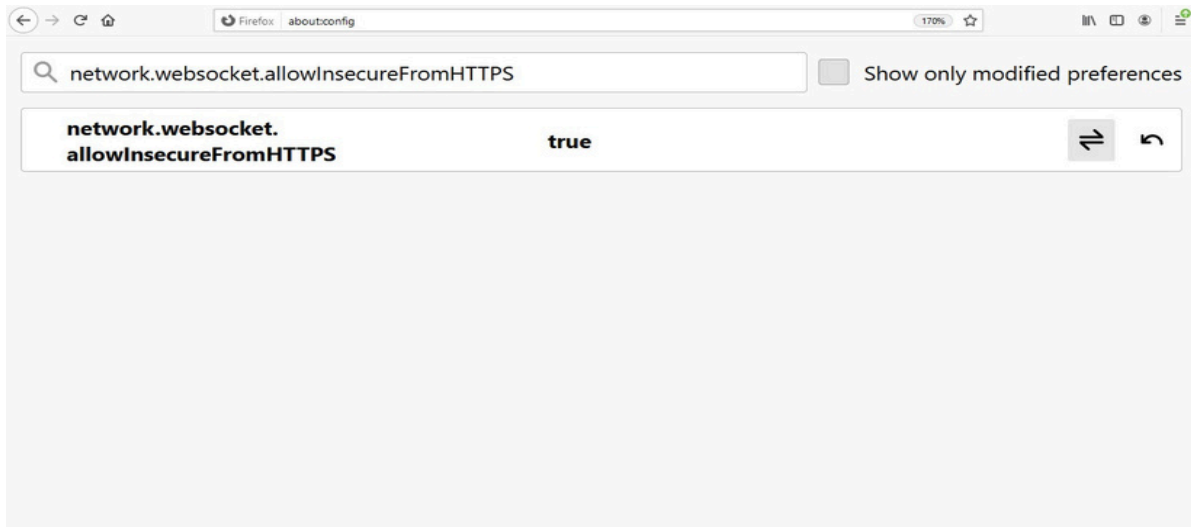



3) Microsoft Edge (For HTTP Request only)

Browse below URL to change value to 'Disable' for 'Block insecure private network requests'
<edge://flags/#block-insecure-private-network-requests>

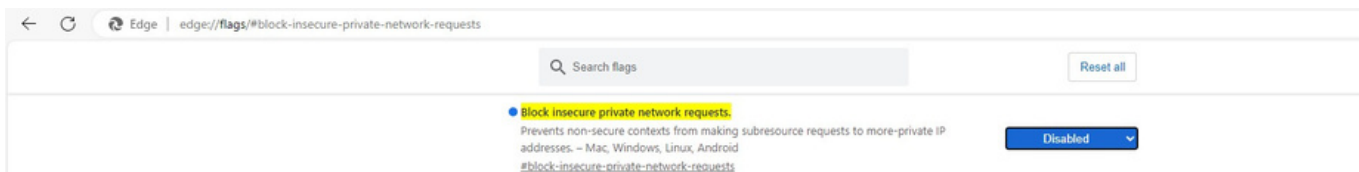


4) Internet Explorer (For HTTP and HTTPS)

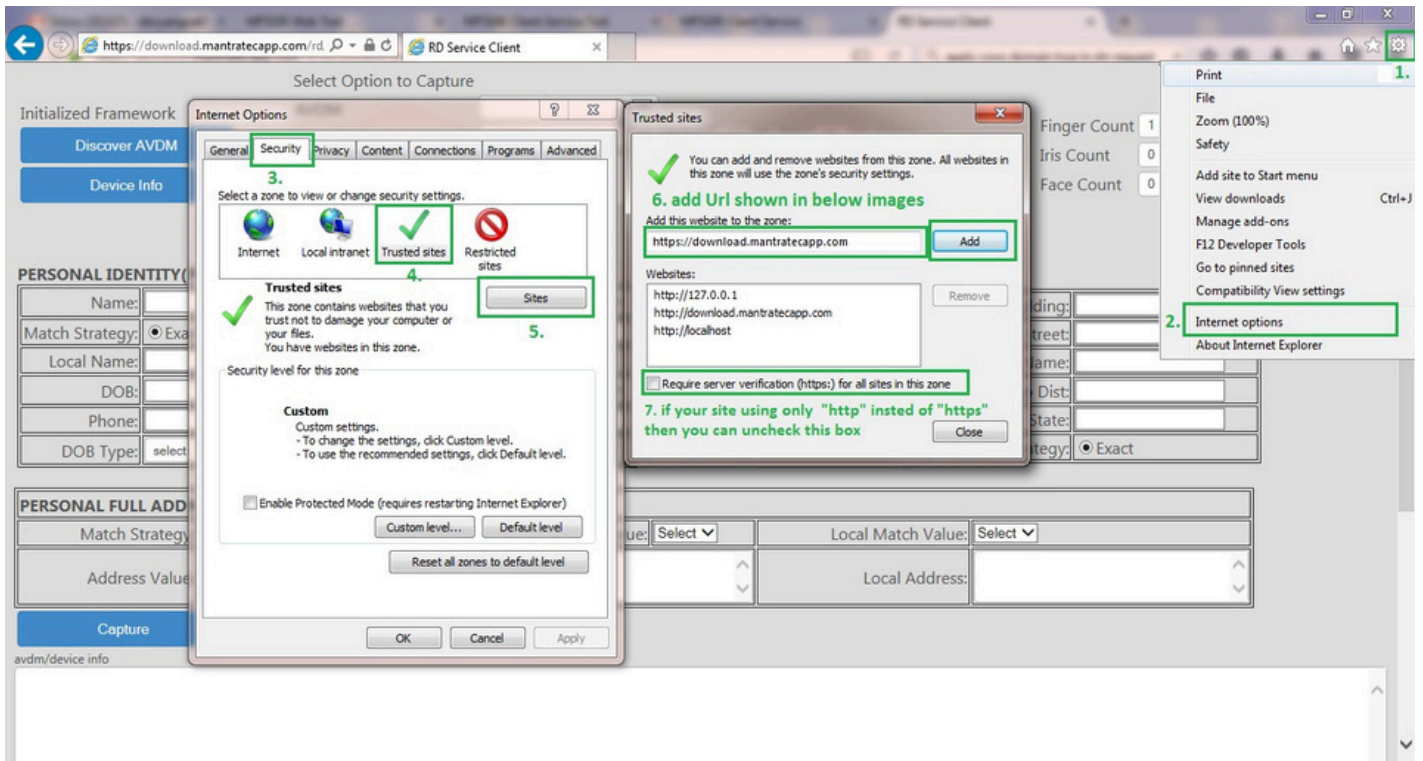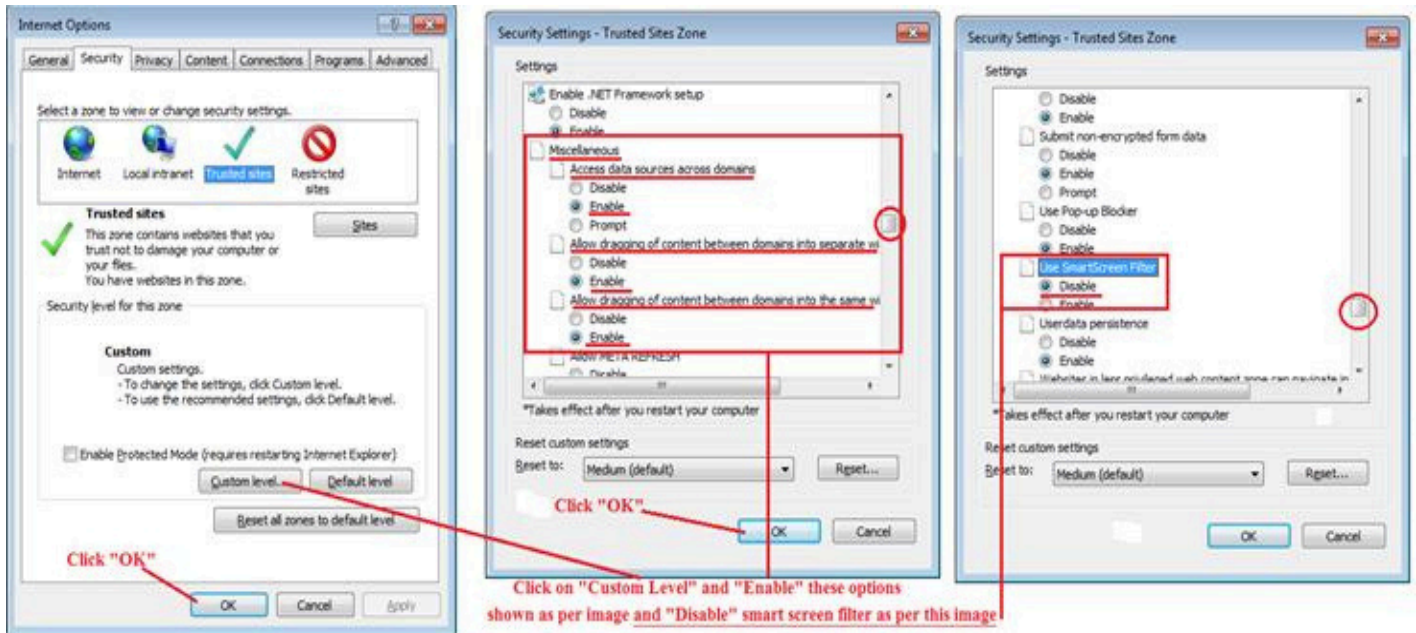

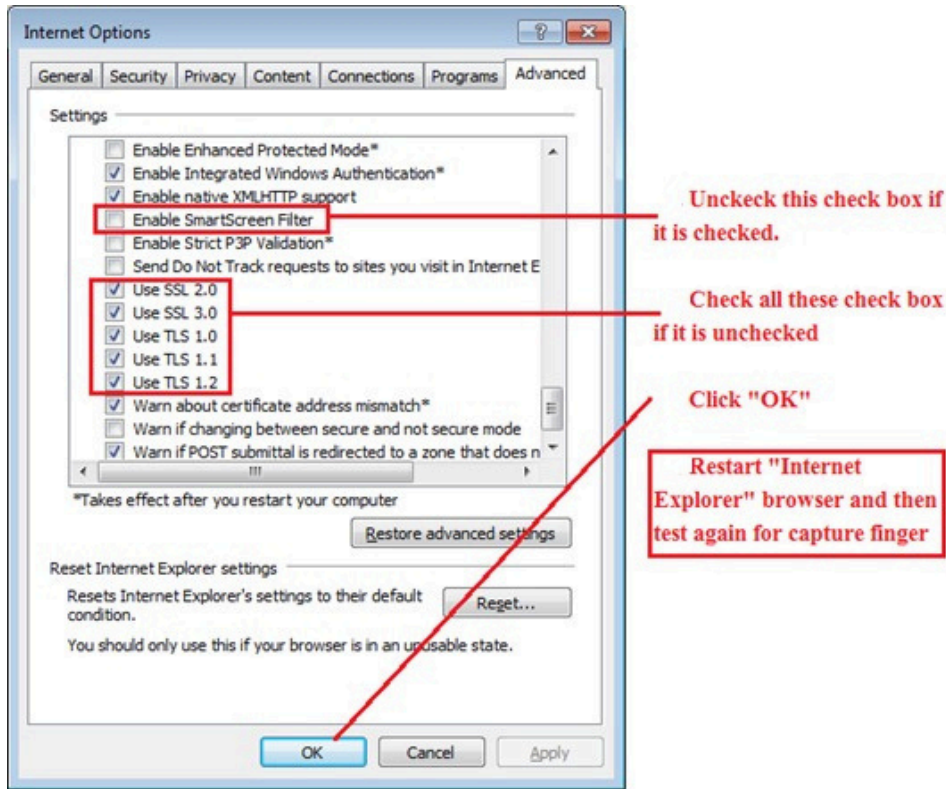

7. Configure System Time Zone

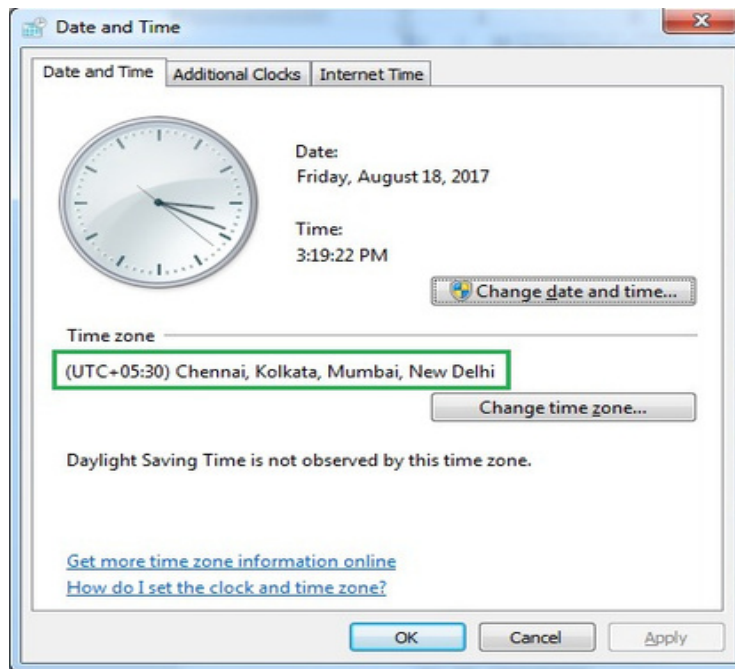

8. Device Registration on Management Server

To register your device under RD Service or required any annual AMC / Installation service support, send the serial number of your Mantra device to -

Toll Free and WhatsApp Number - +91 84343 84343

Mail : - support@radiumbox.com

9. Technical Support

Radium Support Team

support@radiumbox.com

+91 84343 84343 or 011-41000036

This information can be shared with your clients or end user for any kind of technical support.